


DISASSEMBLING :

- * Be sure to remove power plug from power outlet after operation.
- * Loosen fixing screw (NO.19) ON both sides.
- * Remove parts in order as diagram shown and then chopper end be taken apart.
- * Keep parts dry after cleaning and assemble together in the reverse order.

order of removing:

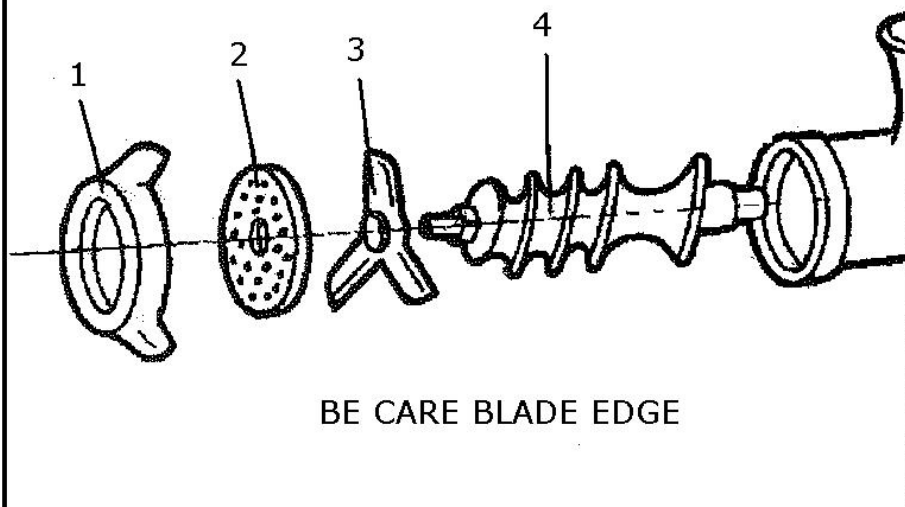

STANDARD ACCESSORIES

1. SAUSAGE FUNNEL 1 PC
2. PESTLE 1 PC
3. MESHPLATE: 1/4", 3/8", 1/2" & 3/4" EACH 1 PC
4. BLADE: 2 BLADE : 1 PC.
3 BLADE : 2 PCS.
4 BLADE : 1 PC.
5. RING 2 PCS.

